



## USER'S GUIDE

### SEAT JACK



## WARNING



- To ensure passenger safety, visually check every component before each use for any signs of damage or loose connections.
- Before each outing, ensure the anchor's wear sleeves are in place and in good condition.
- The SeatJack must always be lifted by the handles or the frame. Failure to handle properly can result in personal injury and damage to both the product and the snowmobile.
- To avoid breaking the locking system, never sit on the Seat Jack if it is not positioned on its anchors.
- Verify torque on all bolts after a few hours of use.



**The safety latches must always be engaged when the seat is on the snowmobile.  
Confirm they are locked before every outing.**

### MAKE SURE THAT THE 2 SAFETY LATCHES ARE RELEASED.

The Seat Jack must be lifted by the handles.


1. Tilt the seat slightly forward and insert the 2 front forks of the Seat Jack's attachment plates into the snowmobile's front anchors.\*

2. Lower the back of the Seat Jack to engage the system on the rear anchors.\*



**\*Note :** It may be necessary to slightly compress or widen the plates of the attachment system during installation in order to fit the seat onto the anchors.\*

3. The outer locking plates must fold down completely over the anchors.

4. Lower the safety latches on each side.

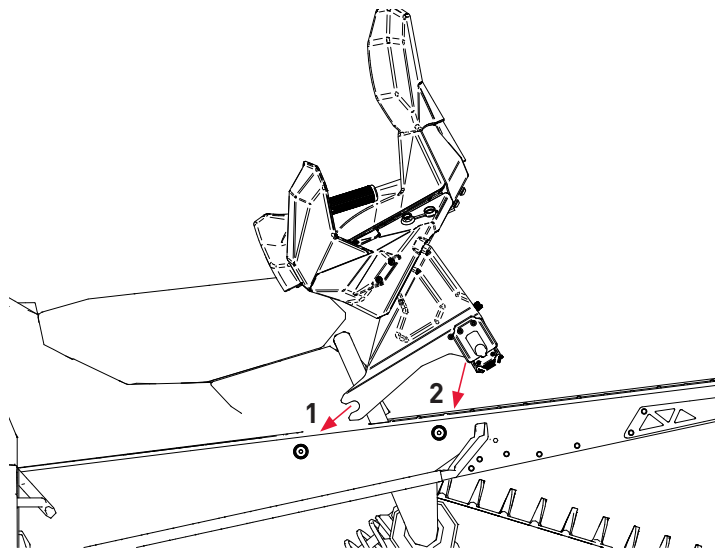

### OVERVIEW OF THE SAFETY SYSTEM

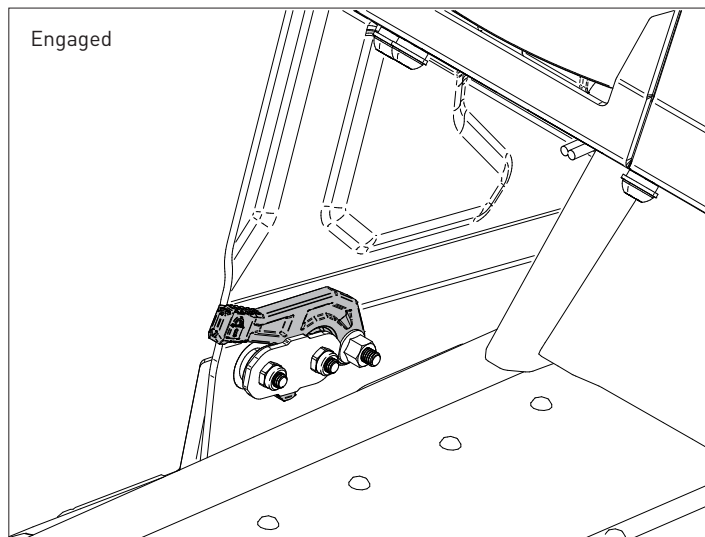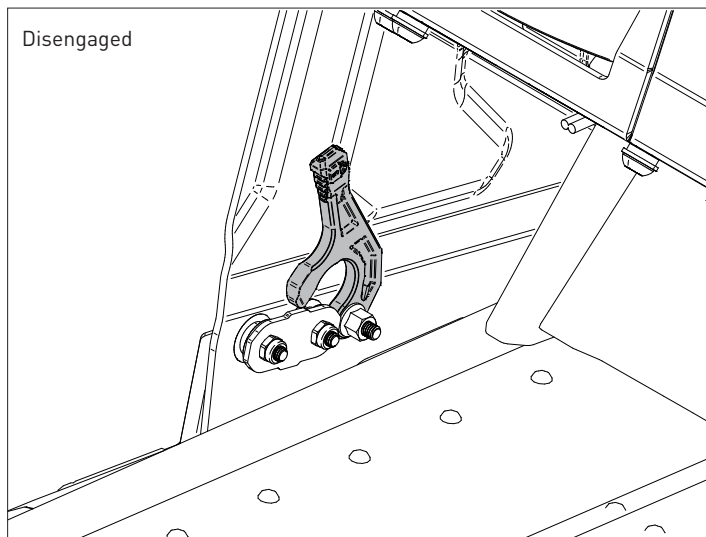

**The safety latches must always be engaged when the seat is on the snowmobile.  
Confirm they are locked before every outing.**