

ROUSKI EVO RETRACTABLE WHEEL SYSTEM INSTALLATION INSTRUCTIONS

ADAPTER PLATE ON PILOT DS2/DS3

472210


INSTALLATION INSTRUCTIONS - 472210

ROUSKI EVO ADAPTER PLATE FOR DS2/DS3 SKIS



KIT INCLUDES				
NO.	PART	QTY	DESCRIPTION	
Rouski EVO mechanism assembly (2x)				
1	472100	1	Rouski EVO Assy Right	
2	472100	1	Rouski EVO Assy Left	
4	472100	2	M6 X 1 X 45 Torx Button Head	
5	472100	2	Wheel Washer	
6	472100	2	M6 X 1 Nylon Insert Nut	
Wheel assembly (2x)				
3	472299	2	ROUSK Wheel kit 143 mm	
Pilot DS2/DS3 Adapter assembly (2x)				
7	472210	2	M6 X 1 Nylon Insert Flange Nut	
8	472210	2	M6 X 1 X 35 Torx Flat Head	
9	472210	4	M8 X 1.25 X 20 Torx T45 Flat Head	
10	472210	2	M10 X 1.5 X 40 Hex Head	
11	472210	2	Oversized Washer For M10	
12	472210	1	Loctite 243 Small Bottle	
13	472210	2	Adaptor Internal Shim Pilot X	
14	472210	1	Adaptor Plate Pre-Assy Right DS2/DS3	
15	472210	1	Adaptor Plate Pre-Assy Left DS2/DS3	

TOOLS REQUIRED:			
DESCRIPTION			
Hammer			
Punch			
Drill			
1/4'' drill bit			
Torque wrench			
Socket T30			
Socket T40			
17mm socket			
Loctite blue 243 medium strength or equivalent			

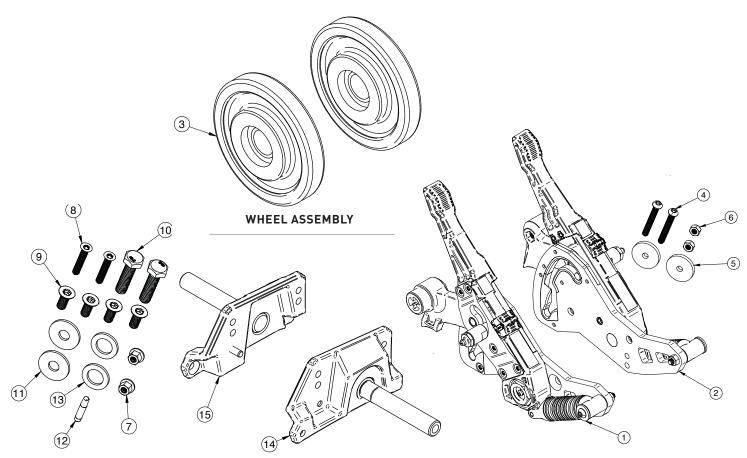


PILOT DS2/DS3 ADAPTER ASSEMBLY


ROUSKI EVO MECHANISM ASSEMBLY



STEP - PREPARE THE MECHANISM

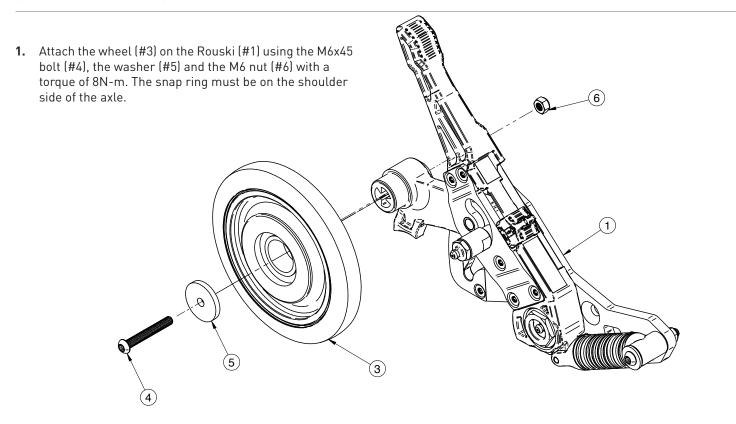


STEP - PREPARE THE SNOWMOBILE

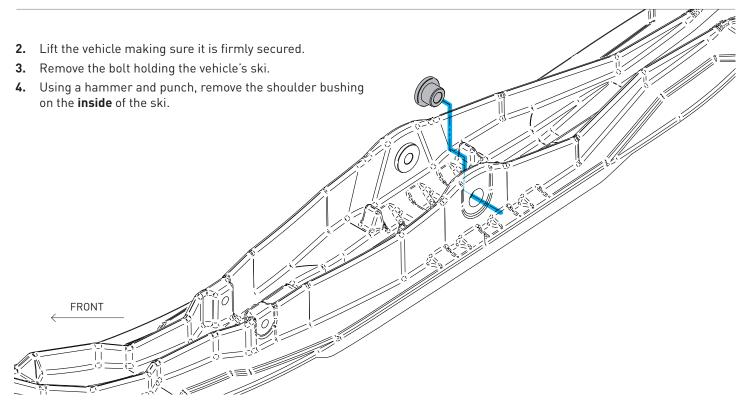




STEP - PREPARE THE SKI

5. Position the adaptor plate on the inside of the ski. The bottom of the adaptor plate must be parallel to the ski base. Use the countersunk hole as a guide and a 1/4" drill bit to drill a hole through the ski's first edge. Remove the adaptor plate.

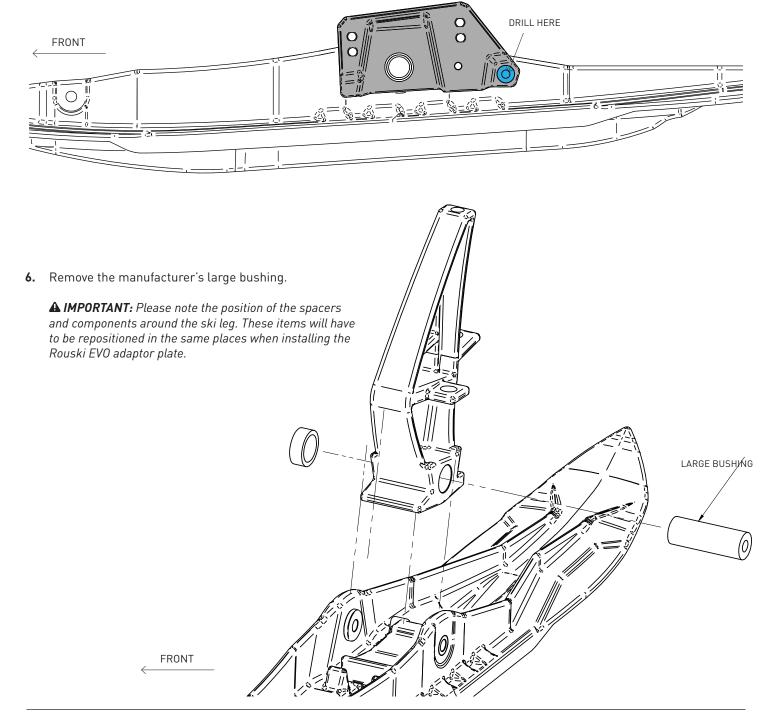




STEP - INSTALL ADAPTOR PLATE

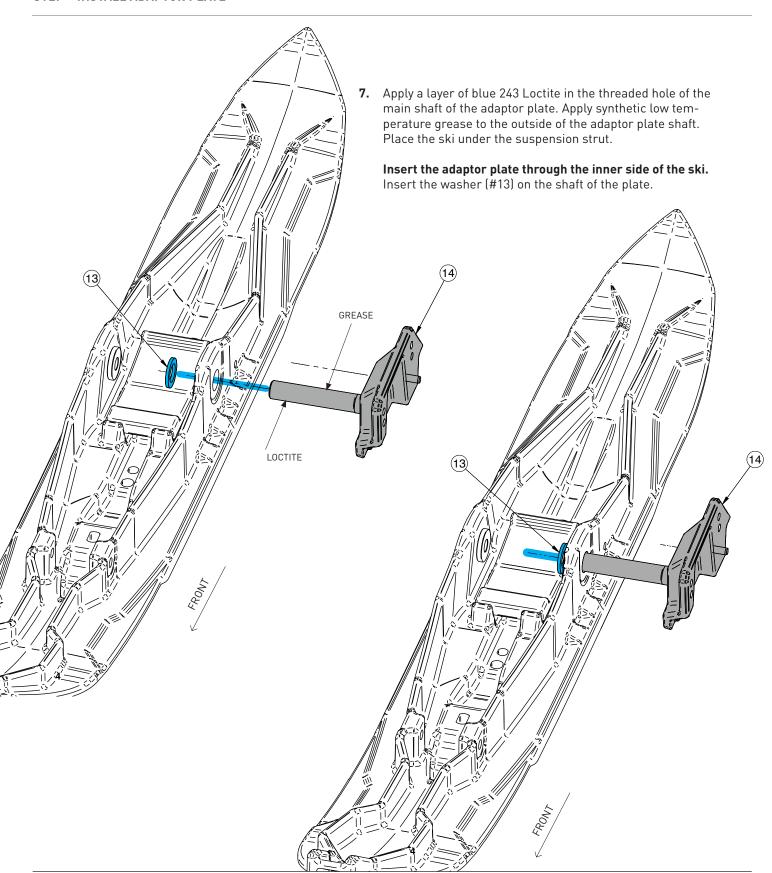



STEP - INSTALL ADAPTOR PLATE

8. Place the M6 bolt (#8) through the adaptor plate and the ski. Apply a layer of blue 243 Loctite on the thread of M10 hex head (#10), insert the washer (#11) and attach the adaptor plate with a torque

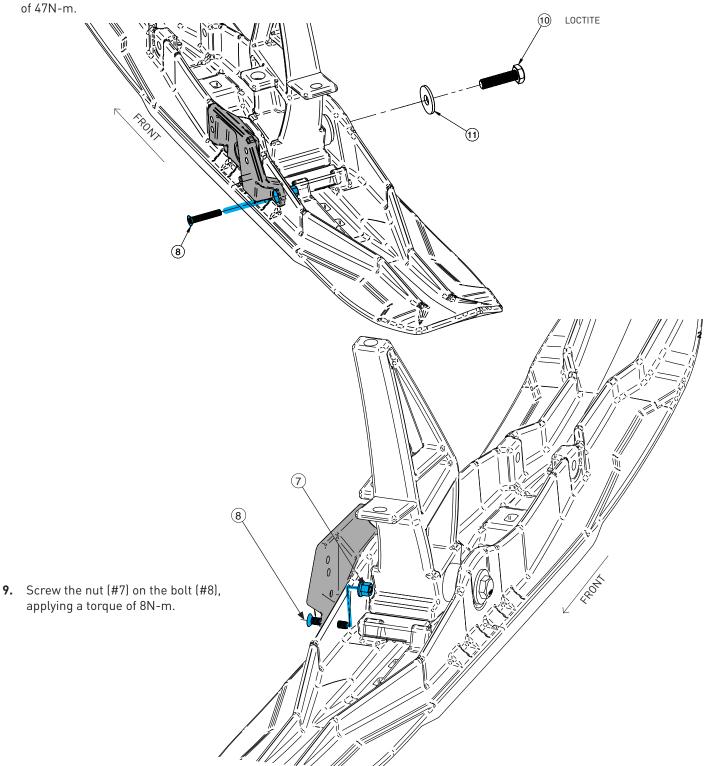


INSTALLATION INSTRUCTIONS - 472210

ROUSKI EVO ADAPTER PLATE FOR DS2/DS3 SKIS



STEP - INSTALL ADAPTOR PLATE

- **10.** Apply a layer of blue 243 Loctite on the thread of the two bolts (#9), then mount the Rouski EVO onto the adaptor plate with a torque of 24N-m. The top position is for original runners. the bottom position is for more aggressive runners*.
- 11. Repeat the same operations for the other ski.

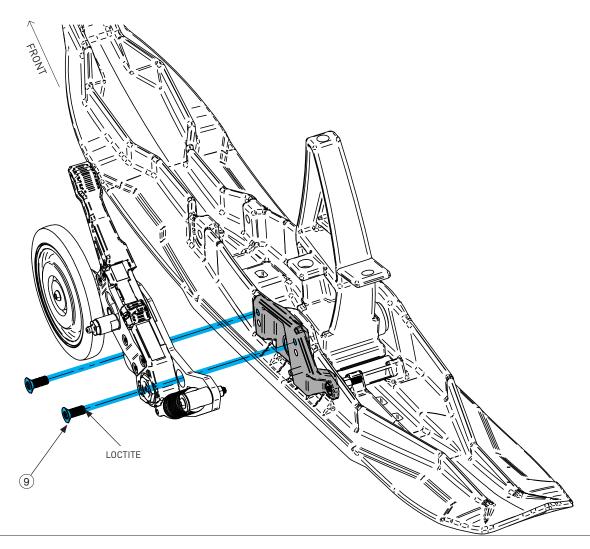

*THE ROUSKI EVO HAS 2 MOUNTING HEIGHTS.

The top position is recommended for runners with a profile height lower than 3/4" (19 mm).

The bottom position is recommended for runners with a profile height of at least 3/4" (19 mm).

IMPORTANT: A wrong height selection could result in an unwanted deactivation of the Rouski or reduce the operating performance of the Rouski EVO.

