



PASSENGER SEAT JACK LT
ASSEMBLY INSTRUCTIONS

SEAT JACK LT

000350



WARNING



WARNING: To ensure safe use of this product, please carefully read the assembly instructions.
Failure to follow these guidelines and instructions could result in property damage, serious injury, or death.

It is recommended that the Seat Jack be assembled and installed by a retailer or someone with the necessary skills to do so. Improper installation of the seat could lead to product malfunction or bodily injury.

This seat is designed to carry one passenger and has a maximum weight limit of 225 lbs (102 kg). Exceeding this weight limit could potentially result in damage to the product or injury.

Always respect the torque specifications. Failure to tighten parts properly could compromise the safety and integrity of the product.

Please be aware that adding a seat for a second passenger could affect how the snowmobile performs and handles. Improper suspension adjustment could also affect the vehicle's handling and its safety.

Failure to handle the product properly can result in personal injury and damage to both the product and the snowmobile. Please use appropriate lifting techniques and follow handling instructions.

Wearing protective equipment when using tools is strongly recommended.

MAINTENANCE

- Use warm water and mild soap to clean the surfaces.
- Never use harsh chemical products.

ASSEMBLY INSTRUCTIONS - 000350

SEAT JACK LT



PARTS LIST

NO.	DESCRIPTION	QTY
1	Base Frame	1
2	Back Plastic Cover	1
3	Left Attachment Plate*	1
4	Right Attachment Plate*	1
5	LT Left Handle	1
6	LT Right Handle	1

NO.	DESCRIPTION	QTY
7	M8 x 1.25 X 20 mm Torx Button Head Screw	4
8	M8 OD 16 mm Flat washer	4
9	Back Plastic Cover Spacer	4
10	M8 X 1.25 X 35 mm Torx Button Head Screw	6
11	LT Handle Spacer	6
12	M8 X 1.25 Nylon Insert Flanged Nut	6


The attachment plates are sold separately.

TOOLS REQUIRED

Torx key / Socket T40

Key / Socket 13 mm

Torque Wrench

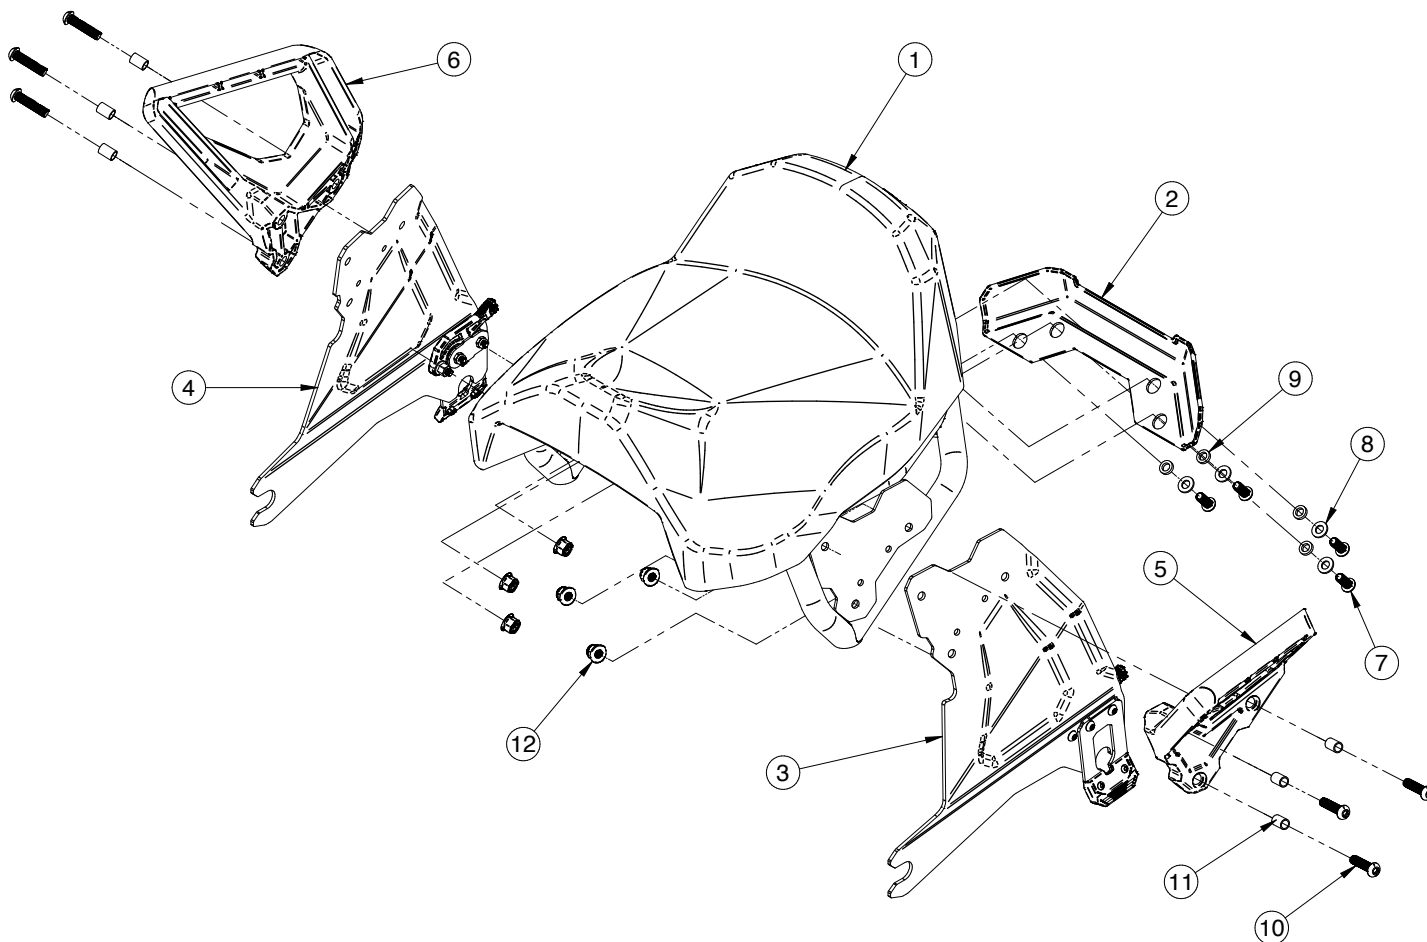

STEP 1 : ASSEMBLING THE LT HANDLES AND ATTACHMENT PLATES

- 1. Left side:** Assemble in the following order:
3 x screws #10, 3 x spacers #11, 1 x left handle #5,
1 x left attachment plate #3, 1 x frame #1 and 3 x nuts
#12. Loosely tighten by hand for now.
(See diagram A)
- 2. Right side:** Repeat the previous steps using
parts #6 and #4.
- 3. Tightening:** Place the assembly on a flat surface
and **apply a torque of 31 Nm** to all 6 screws.

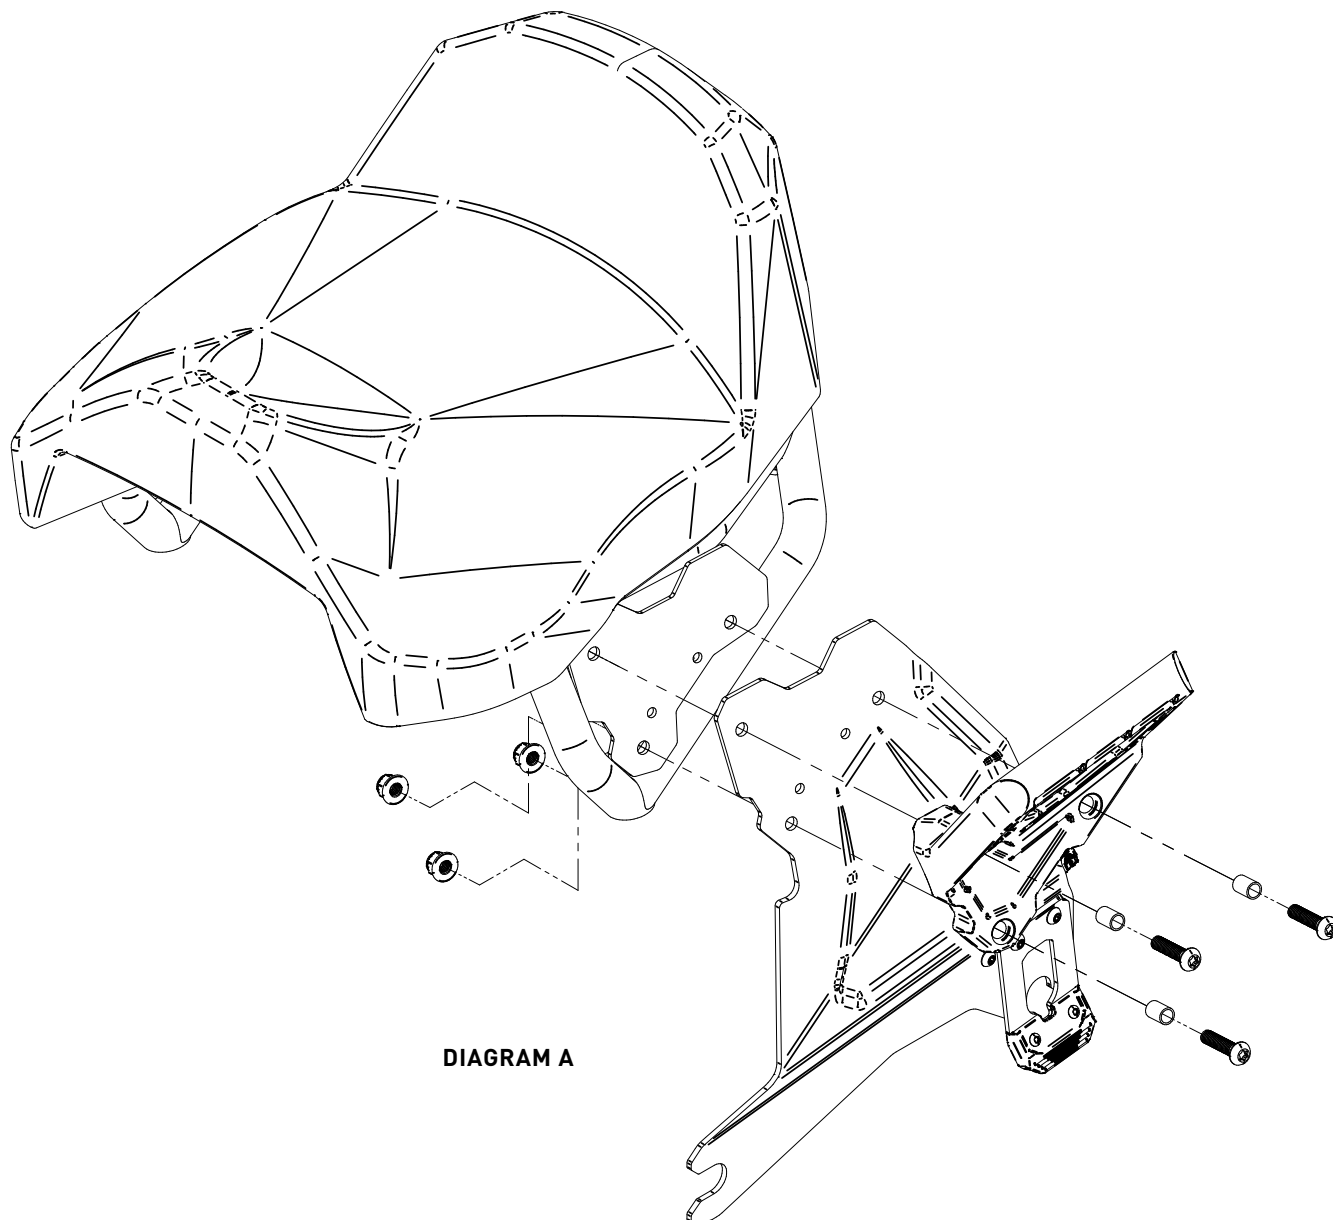


DIAGRAM A

[SEE DRILLING INSTRUCTIONS FOR SNOWMOBILE ANCHORS](#)

CLICK ON THE LINK

